


MOUNTING INSTRUCTIONS

This mortise lock set is designed to be mounted on doors 1 inch to 1-3/8 inches thick. Beveled bolt is reversible.


- 1). Cut out templates below.
- 2). Tape template 1 on edge of door at desired height. Fold over edge.
- 3). Tape template 2 on side of door. Line up center lines. Mark cut-outs for mortised lock, faceplate and holes.
- 4). Cut out door and drill holes as indicated.
- 5). Insert lock and fasten.
- 6). Fasten escutcheons as shown. Insert lever handle with stem. Screw knob on stem and tighten set screw.
- 7). Mount strike on door frame.

NOTE: FOR CONTINUED EASE OF OPERATION, PERIODICALLY APPLY A LOCK CYLINDER LUBRICANT

TEMPLATES

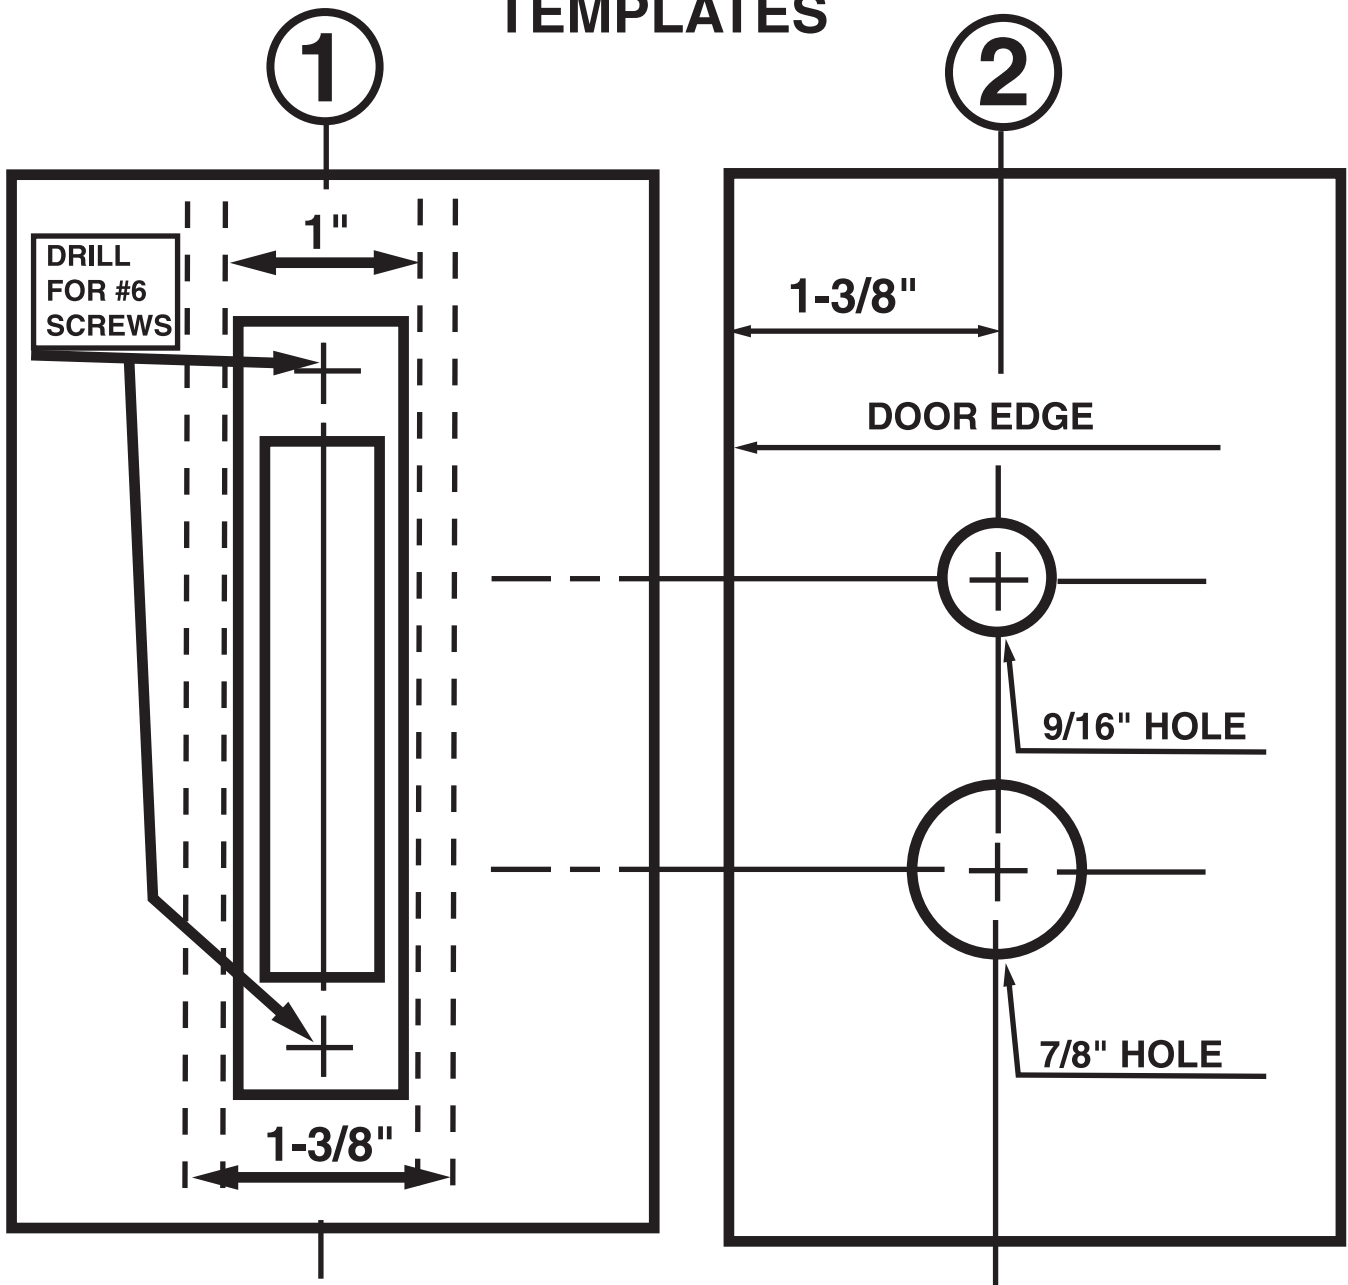

**EXPLODED VIEW
CAT. NO. 0927000CHR LOCKSET**

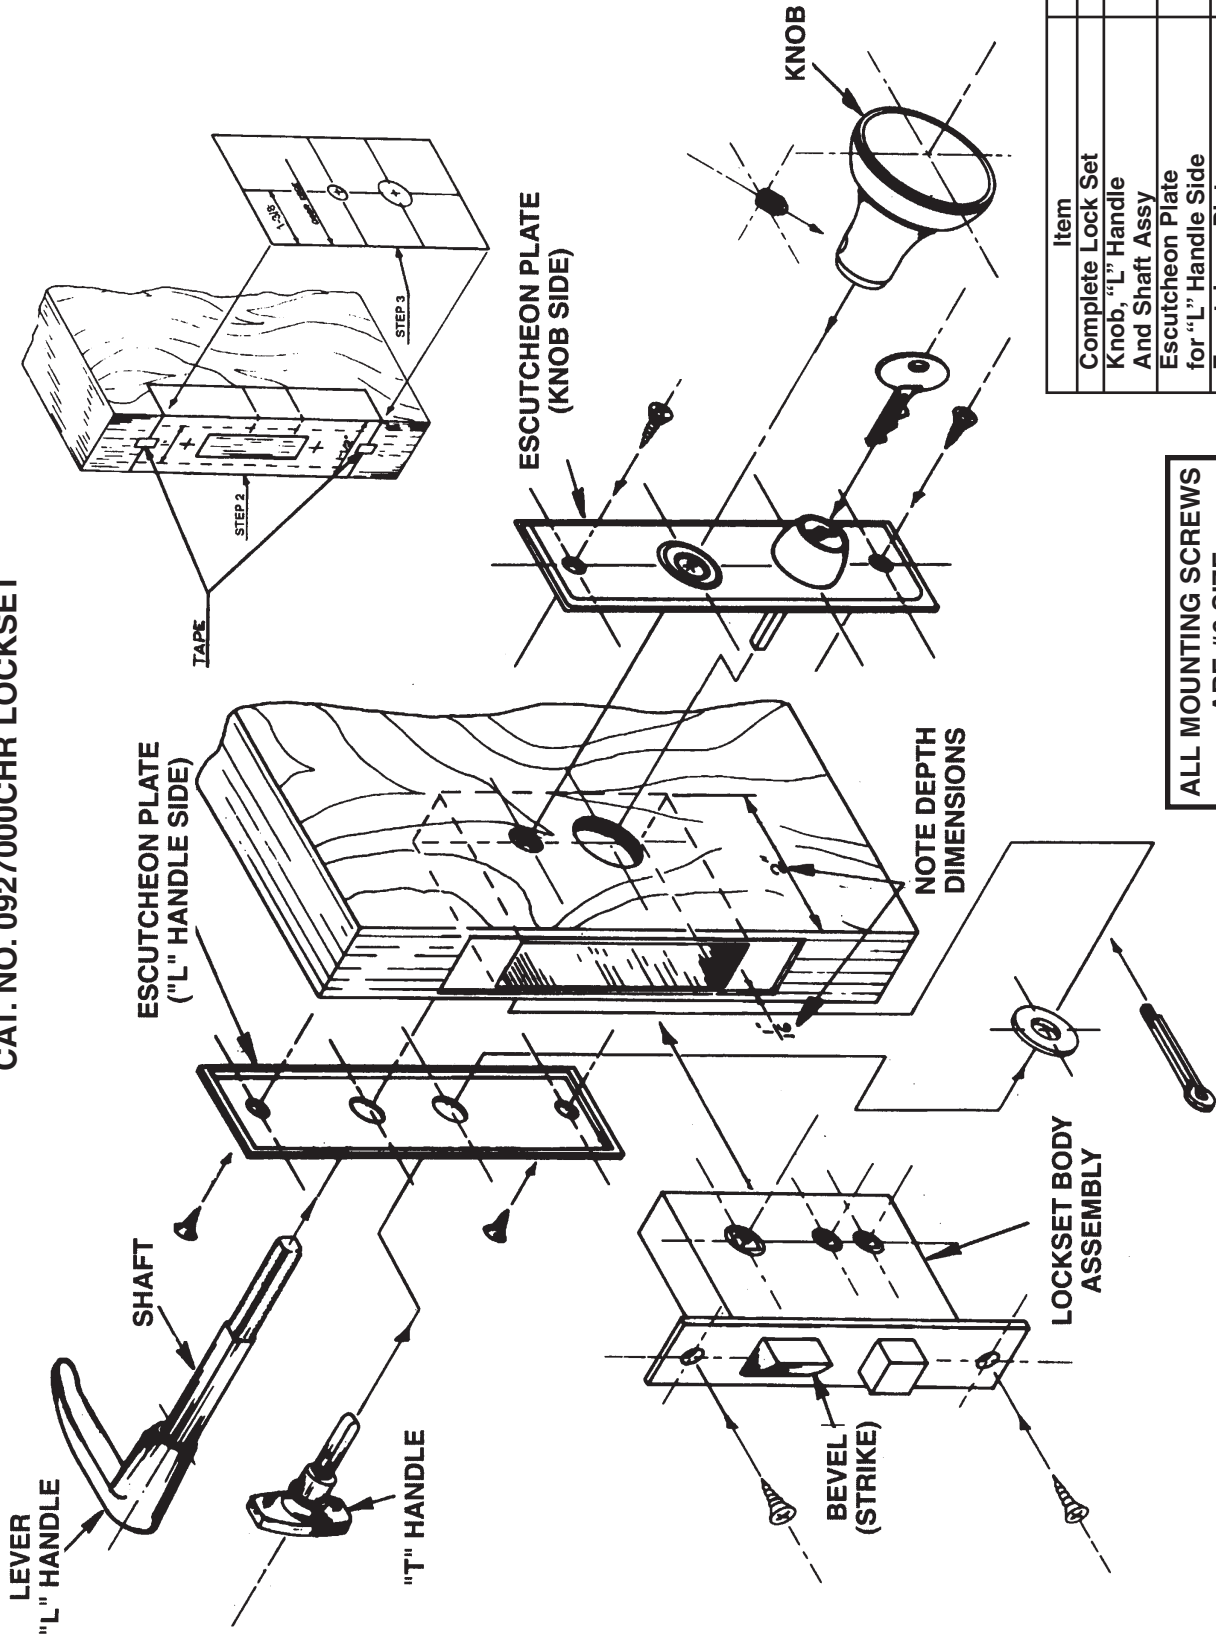

**ALL MOUNTING SCREWS
ARE #6 SIZE
NOT SUPPLIED**

Item	Catalog Number
Complete Lock Set	0927000CHR
Knob, "L" Handle And Shaft Assy	0962000CHR
Escutcheon Plate for "L" Handle Side	092700088A
Escutcheon Plate For Knob Side with Keyset Lockset Body Assy Only	092700099B
"T" Handle with Cotter Pin	092700088B
Bevel with Cam (Strike)	0920000CHR
Strike Plate Only (Not Shown)	0913DP0CHR

PERKO®